


TransDoctor™ Quick Start Guide

A) Install the TransDoctor USB driver.

IMPORTANT: Installing the TransDoctor driver is a 2 step process. Follow step 1 thru 14. Then, the install Wizard will ask you to perform the same procedure again. The second time, the installation process will then complete.

1. Proceed and connect the TransDoctor to the USB port.
2. The "Welcome to Found New Hardware Wizard" window will then start.
3. Click "No, not at this time" to the internet question.
4. Next, proceed and check "Install from a list or specific location".
5. Make sure "Check for best drivers in these locations" is checked.
6. Next, click the "BROWSE" button to the right.
7. Double click "My Computer". Then "TransDoctor CD ROM" and finally

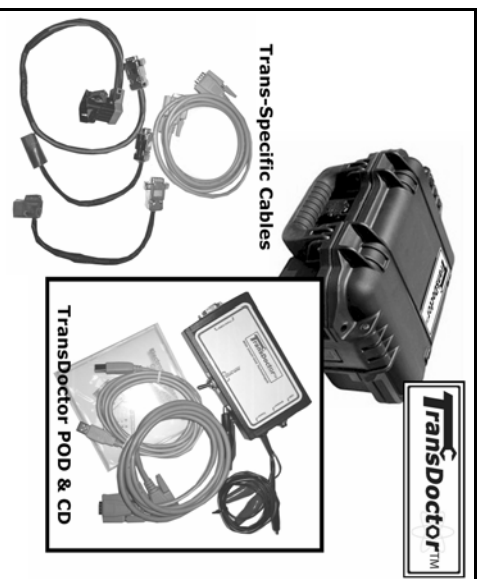

8. "TransDoctor Driver". Then, click "OK".
9. The "TransDoctor Driver" folder will show up on the small white label. Press "Next" to continue.
10. Afterwards, click "Finish".
11. Next, the install Wizard will repeat this process once more. Follow steps 1 thru 10 again.

NOTE: This Finalizes the TransDoctor DRIVER installation procedure. As stated before, it has to be done twice. The DRIVER is a small program that runs the communication port only. It is done by a third party software company that makes the USB chips. This is identical for all Windows based hardware.

B) Determine the COM PORT.

1. After installing the driver proceed to determine the COMM PORT as follows:
2. Go to "Control Panel", double click "System", "Hardware Tab", and "Device Manager".
3. Open or (check on the + sign) at the "Ports (COM & LPT)" option.
4. Double click on the "TransDoctor".
5. There besides the TransDoctor name

you'll see the COMM port number assigned to it. This is the port that you'll have to type in when you start the software.

6. Finish by clicking "OK" to the rest and exiting "Control Panel".

NOTE: The TransDoctor has an extensive transmission database. For it to work you must have the TransDoctor CD ROM inserted in any available drive. It will work on any drive.

TransDoctor™ Quick Start Guide

C) Install the TransDoctor software.

1. Go to the TransDoctor CD ROM then double click "**Setup**".
2. Follow the few easy installation steps.
3. Then, go to "**My Computer**", **C:Drive**, "**Program Files**", "**TransDoctor**". Then, right click on the "**TransDoctor**" **Wheel Looking Icon**, choose "**Send to**" then "**Desktop(create shortcut)**". This will create a shortcut to the TransDoctor so that all you do is double click on it to start the software.

NOTE: The TransDoctor has an extensive transmission database. For it to work you must have the TransDoctor CD ROM inserted in any available drive.

Troubleshooting Tips:

Some computer modems, internal driver and Bluetooth devices may leave the COMM Ports in an open state. If you experience a "No Communication" message, simply log out of Windows and log back in again. Do this by clicking on the "Start" button, then "Log Off". This action will reset all comm ports back to normal. This is an issue typical of windows and affects all USB devices.



Automotive Diagnostics & Publishing
www.autodiagnosicsandpublishing.com
For Tech-Support call your local distributor.